

Transmitter 2-wire, intrinsically safe


II 2 G Ex ia IIC T4 Gb II 2 D Ex ia IIIC T115°C

#### Function: Intrinsically safe transmitter with ATEX/IECEx certificate for use with WEKA VLI for media temperature ≤ 150°C

The transmitter is mounted outside of the float chamber opposite to the indication rail (see datasheet 20010501). The magnet inside the float activates the reed switches in the transmitter, depending on the level of liquid in the float chamber, thereby changing the effective value of a resistance network. The resulting voltage output is converted by an internal electronic circuit to a 4...20mA signal.

If the liquid level rises above the measuring range of the transmitter the output signal jumps to 115% and remains on that limit. This transmitter is compatible with Zones 1, 2, 21 and 22 for gas groups IIA, IIB, IIC, IIIA, IIIB and IIIC.

The transmitter must be connected with a certified energy limiting device (e.g. Zener barrier) installed in a safe area. This device guarantees the electrical limit values specified below, including the cable. The metal housing of the transmitter must be connected to protection ground.

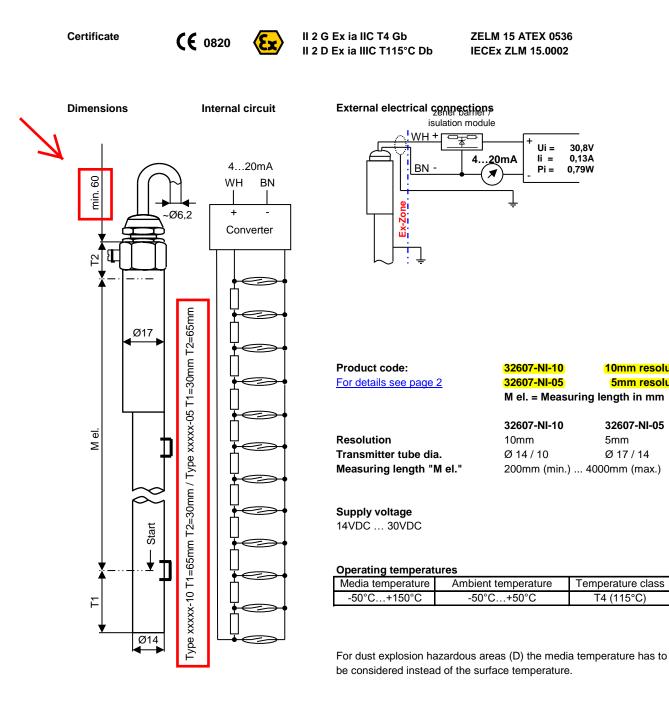

Enclosure

IP68 - 10bar (EN60529)

**Type 32607-NI-xx** 

**10mm resolution** 

**5mm resolution** 

32607-NI-05


5mm


Ø17/14

T4 (115°C)


# Type 32607-NI-xx

# Signal output

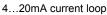

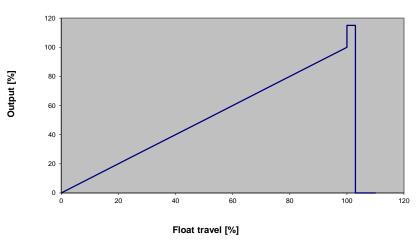

Output load (including energy limiting device and cables) max. 100Ohm at 14VDC max. 900Ohm at 30VDC

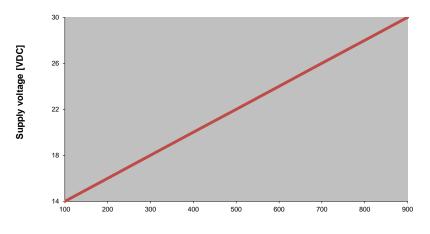

Load [Ohm]

Stainless steel 316 / 316L

Brass, nickel-plated

#### Materials

Housing tube Cable gland - Seal Cable (Standard 5m) Type label

#### Electrical limit values

Umax = 31VDC Imax = 25mA PA / NBR Silicone, red, 2 x 0,5mm2, Ø ~5,9mm, largely resistant to oils/petroleum products, halogen-free Stainless steel, lasered

# Safety related limit values

Ui = max. 30,8V Ii = max. 130mA Pi = max. 790mW Ci ≈ max. 49nF Li ≈ 0mH

### Fixation

When ordering level indicators with transmitters, hose clamps are included.When ordering transmitters as spare parts, hose clamps are never included and must be ordered seperately.In case of ordering hose clamps pipe size must be indicated.For pipe diameter30...40mmP/O80648For pipe diameter40...57mm and 57...80mmP/O84043

# Note

 Please read the instructions in our datasheet 20010501 before performing installation.

 This device is maintenancefree and repair work is prohibited.

 The cable must be durably installed.

 The relevant certificates are available at
 www.weka-ag.ch

 These information has to be considered additionally.